



# Saltwater AIR Rods Guide Spacing Chart

As measured from the top end of the tip top to the top end of the guide foot.

